



This is the guide to install USB driver for 758 indicator for Window 7 64 bits

1. Make sure 758 setup prompt Port = 3. This prompt tells the 758 to use the USB connection
2. Plug the device into the computer. If it tried to install the driver automatically, it will fail. If that's the case continue to step 3. Otherwise it will show up a window asking “How do you want to search for driver software?” Skip to step 5.
3. Go to Start menu → Left click on Computer → Select Properties → Device Manager. You will see an “Unknown Device” as shown in the picture.

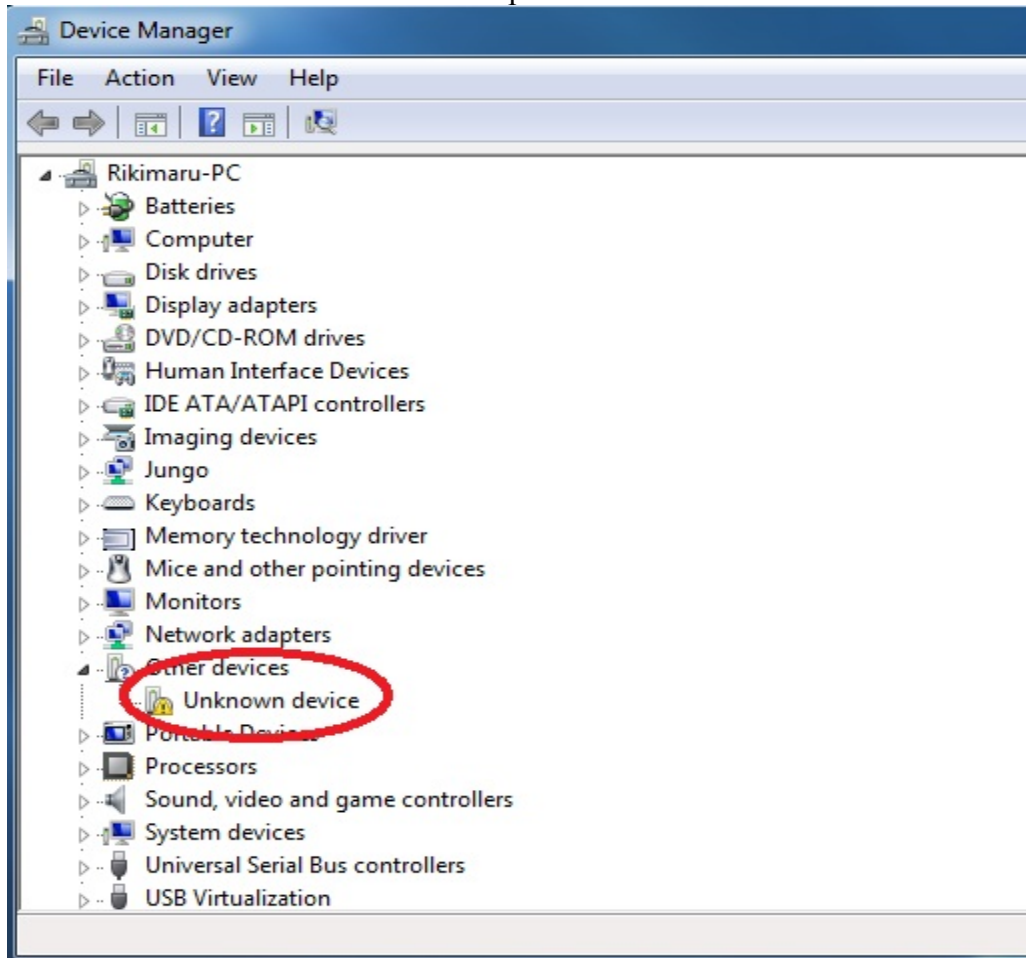


4. Left Click on the Unknown device → Update driver Software
5. You should see a window similar to the one below. Select “Browse my computer...”

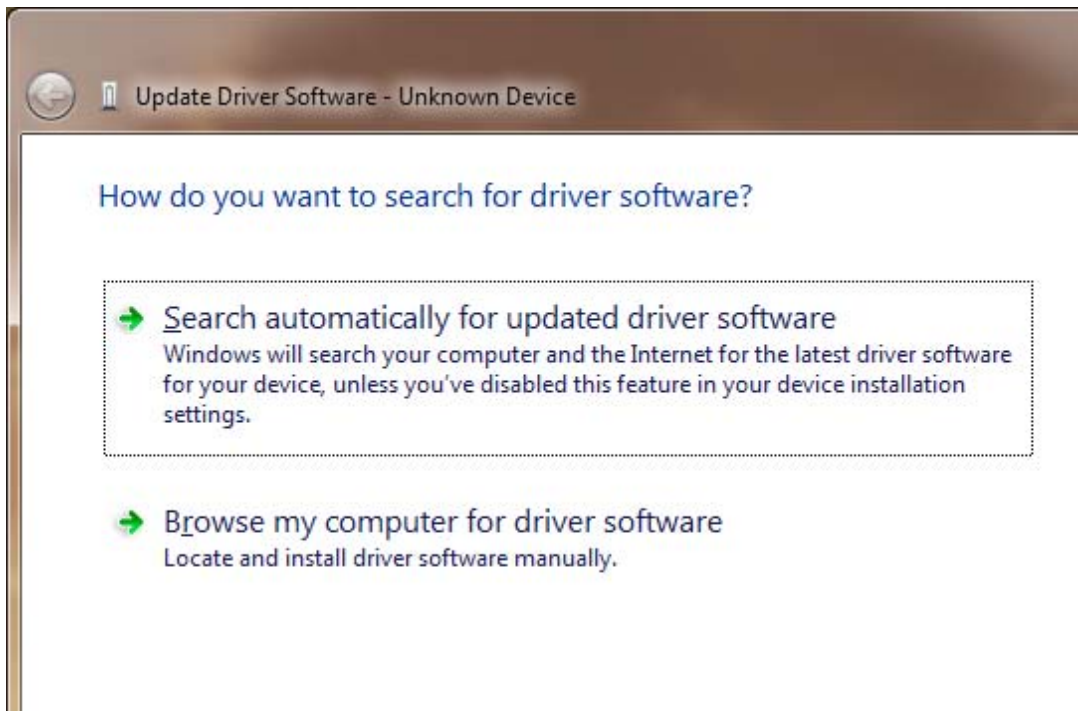


6. Select “Let me pick”



7. Click Next

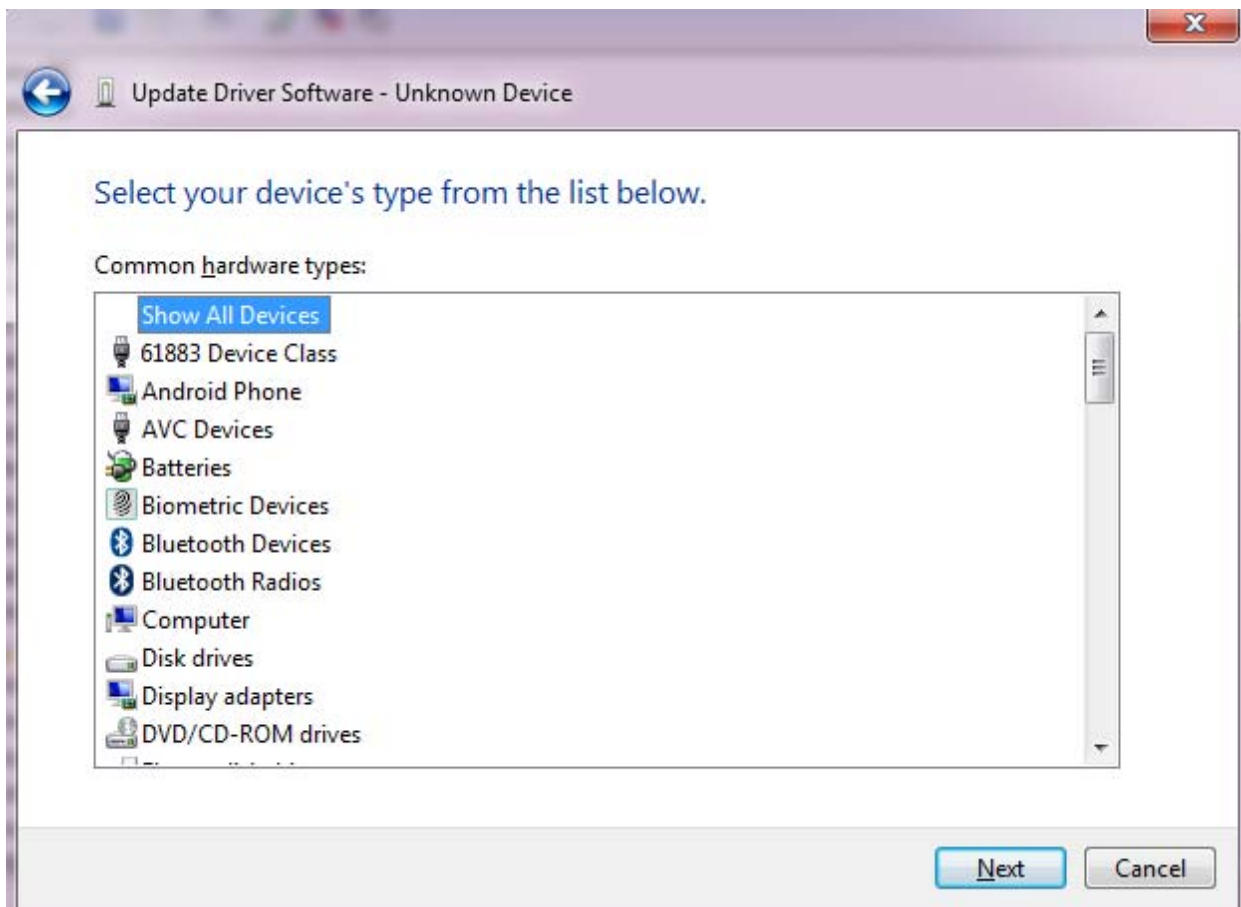

8. Select "Have Disk"

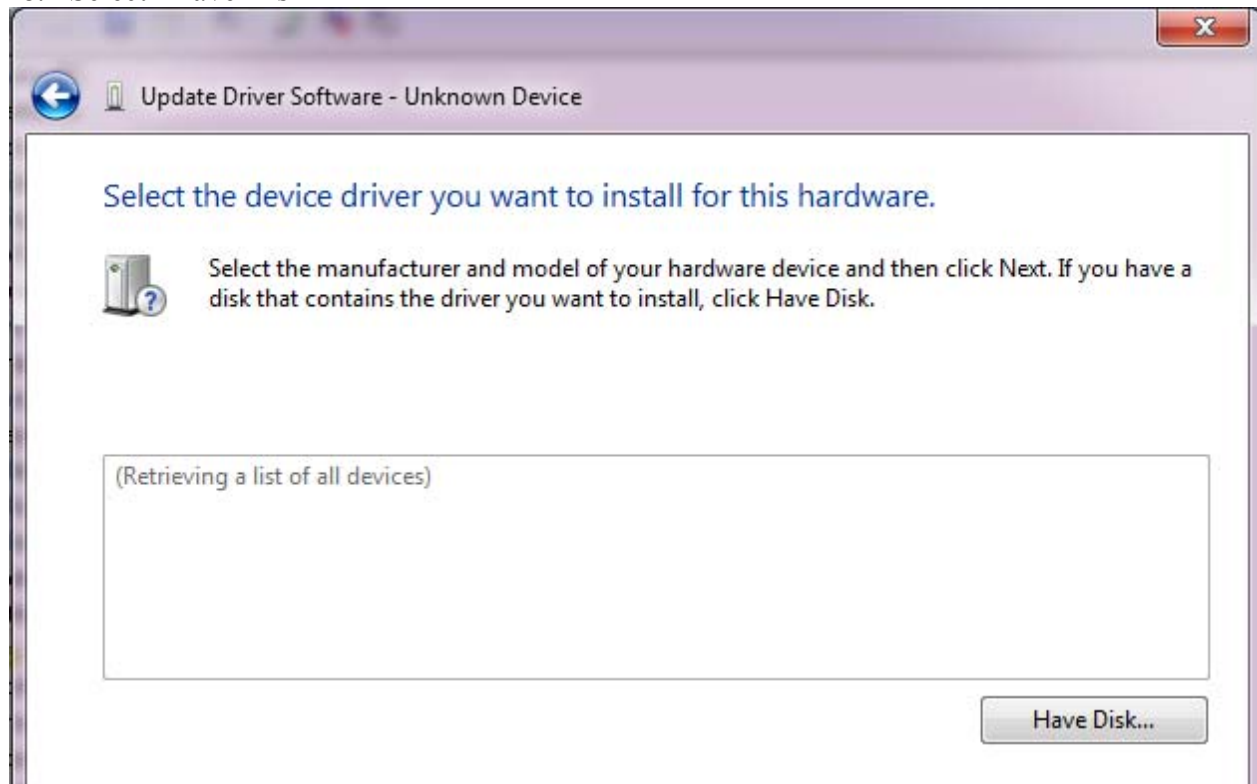

9. You should see this window below. Browse to the inf usb driver you downloaded from Detecto website. Then hit OK. The message will appear as Freescale CDC. Window will complain about unknown source. Answer OK/Yes to all its warnings. Once the installation is complete you should be able to see message when you hit Print key on HyperTerminal

