


PRODUCT SPECIFICATIONS

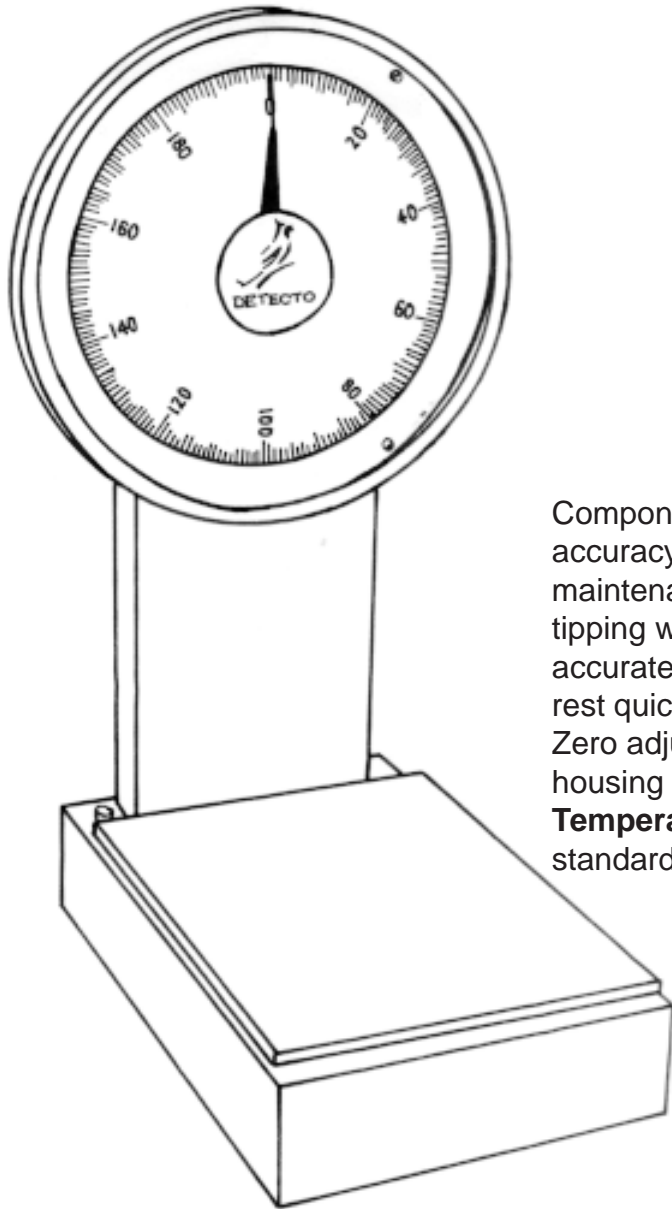

**“Legal for Trade”
Heavy-Duty Bench Scales
Series 1100**

- *Large 19" Dial*
- *15" Diameter Reading Line*
- *Platform 13 3/4" x 18 1/2"*

Components of Detecto's Series 1100 scales are designed for accuracy under prolonged use, sturdy construction, and low maintenance. Special tip locks and bearings prevent platform tipping which avoids pivot and bearing abuse and assures accurate long-life weighing. Side checks bring the platform to rest quickly, providing accurate readings from the large dial. Zero adjustment is located on the top outside of the dial housing making it readily accessible. **Thermal Elastic Temperature-Compensating Springs** and **Oil Dashpot** are standard features adding to their long-term accuracy.



Series 1100 Bench Scales meets all requirements of Handbook 44, issued by the National Institute of Standards and Technology, and has been issued the Certificate of Conformance number 89-032A2.

Model	Capacity
1100DB	50 lb x 1 oz
1102DE	100 lb x 2 oz
1102EDX	100 lb x .1 lb
1105DG	200 lb x 4 oz
1106DK	300 lb x 8 oz
1100DBK	25 kg x 25 g
1102EDK	50 kg x 50 g
1106DKK	150 kg x 250g

Options:

- Rubber-wheeled stand, adjustable in 1" increments
- "L" shaped, stainless steel pans for special requirements
- Kilos and libra dial charts
- Other capacities available on request

Cardinal Scale reserves the right to improve, enhance and modify features and specifications without prior notice.