



**AC or Built-in
Rechargeable
Battery Power**



Digital Portion Scale **WITH EXTENDED TRAY**



Ideal for weighing meats, cheeses, and condiments for sandwiches and salads, Detecto's PS-7 portion scale features an optional extended tray.

Digital Portion Scale

with
EXTENDED TRAY

PS7 SPECIFICATIONS

CAPACITY AND INCREMENTS:

- 7 lb x 0.1 oz
- 112 oz x 0.1 oz
- 112 oz x 1/8 oz
- 3,000 g x 1 g
- 7 lb x 0.005 lb

(can disable different units of measurement)

DISPLAY:

5-digit, 0.8" x 0.3" characters with fractions LCD display

POWER:

Built-in rechargeable battery pack included (7.2 VDC/1200mA) or 115 VAC 50/60 Hz or 230 VAC 50/60 Hz powering a 15 VDC 300mA wall plug-in UL/CSA listed power supply.

TARE:

100% of full scale capacity

KEYS:

ON/OFF, ZERO, UNITS

ZERO:

Established on power up routine and maintained by auto-zero circuitry

TEMPERATURE:

40° to 105° F (5° to 40° C)

HUMIDITY:

25% ~95% RH

Detecto's PS7 is Ideal for Restaurants, Cafeterias, Deli's, Pizza Parlors, and Food Service Professionals!



Detecto model PS-7 digital portion scale shown here with optional model ET7 extended tray.




FOOD PREP WEIGHING MADE EASY!

Detecto's new oversized stainless steel tray for the model PS-7 digital food service scale opens new avenues for portion control weighing. The extra-large platter measures 9-3/4" wide x 6-3/4" deep and lifts off for easy cleaning. The NSF-certified scale features 5 different units of measure, including 7 lb x 0.1 oz, which can be disabled if the user wishes to shut off units of measure not needed. The PS-7 scale features an IP52 water-resistant enclosure and offers a choice of built-in rechargeable battery or AC power. The 0.8 inch high LCD display features 5 digits and a power-saving "auto-off" feature to reduce energy consumption. The main board on each unit has a moisture-resistant coating, adding additional protection from the elements of everyday use in the food industry.

FEATURES

- Easy-To-Read LCD Display
- Switch Selectable Units
- Built-in Rechargeable Battery or AC Power
- NSF Certified
- IP52 Water Resistant Enclosure
- Easy-To-Clean, Removable, Extended Stainless Steel Tray

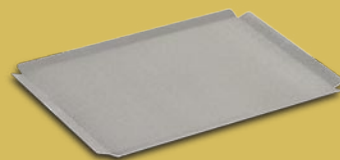

MODEL ET7 - EXTENDED TRAY


CONSTRUCTION: Stainless steel
DIMENSIONS: 9.75" W x 6.75" D
SHIPPING WT: 1 lb



MODEL PS7 - PORTION SCALE

CONSTRUCTION: Poly enclosure
DIMENSIONS: 8" W x 7.8" D x 2.4" H
SHIPPING WT: 4 lb

Detecto Scale reserves the right to improve, enhance, or modify features and specifications without prior notice.

 **DETECTO**
A Division of Cardinal Scale Manufacturing Co.
203 E. Daugherty, Webb City, MO 64870 USA
Ph: 417-673-4631 or 1-800-641-2008 Fax: 417-673-5001
www.Detecto.com

Sold By: